


REV-11 Configuration Guide (M9400-YA, -YC, or -YH)

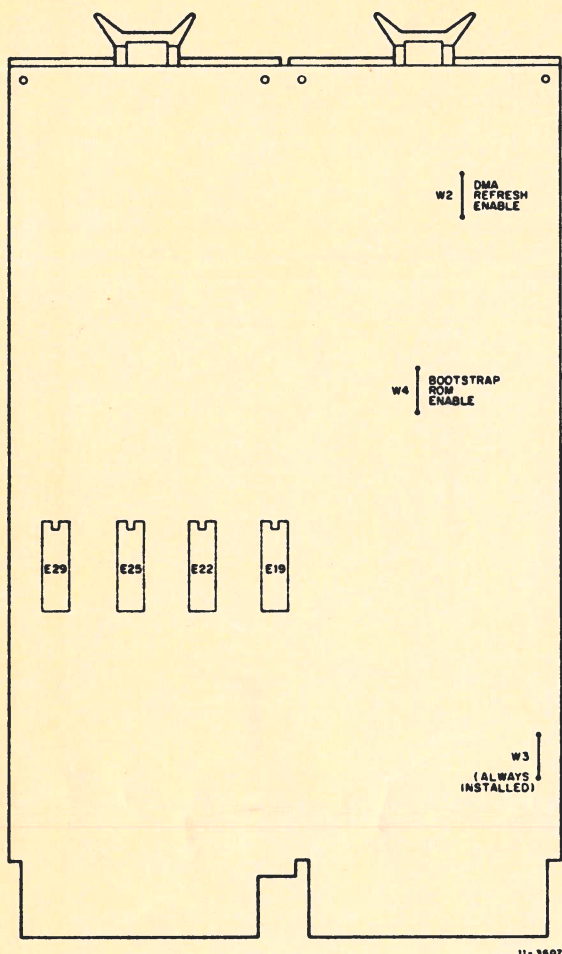

1.

<u>ROM Enable</u>	
<u>ROM</u>	<u>W4</u>
Enabled	I
Disabled	R

2.

<u>DMA Refresh</u>	
<u>Refresh</u>	<u>W2</u>
enabled	I
disabled	R

Refresh rules:

Enable Refresh if any mos RAM memory in the system requires external refresh.

The memory electrically farthest from the REV-11 must reply to refresh.

Ensure that KD-11 refresh is disabled.

Disable REV-11 refresh if no memory in the system requires external refresh.

I=Inserted
R=Removed